


VANITY LIGHT COMPONENTS

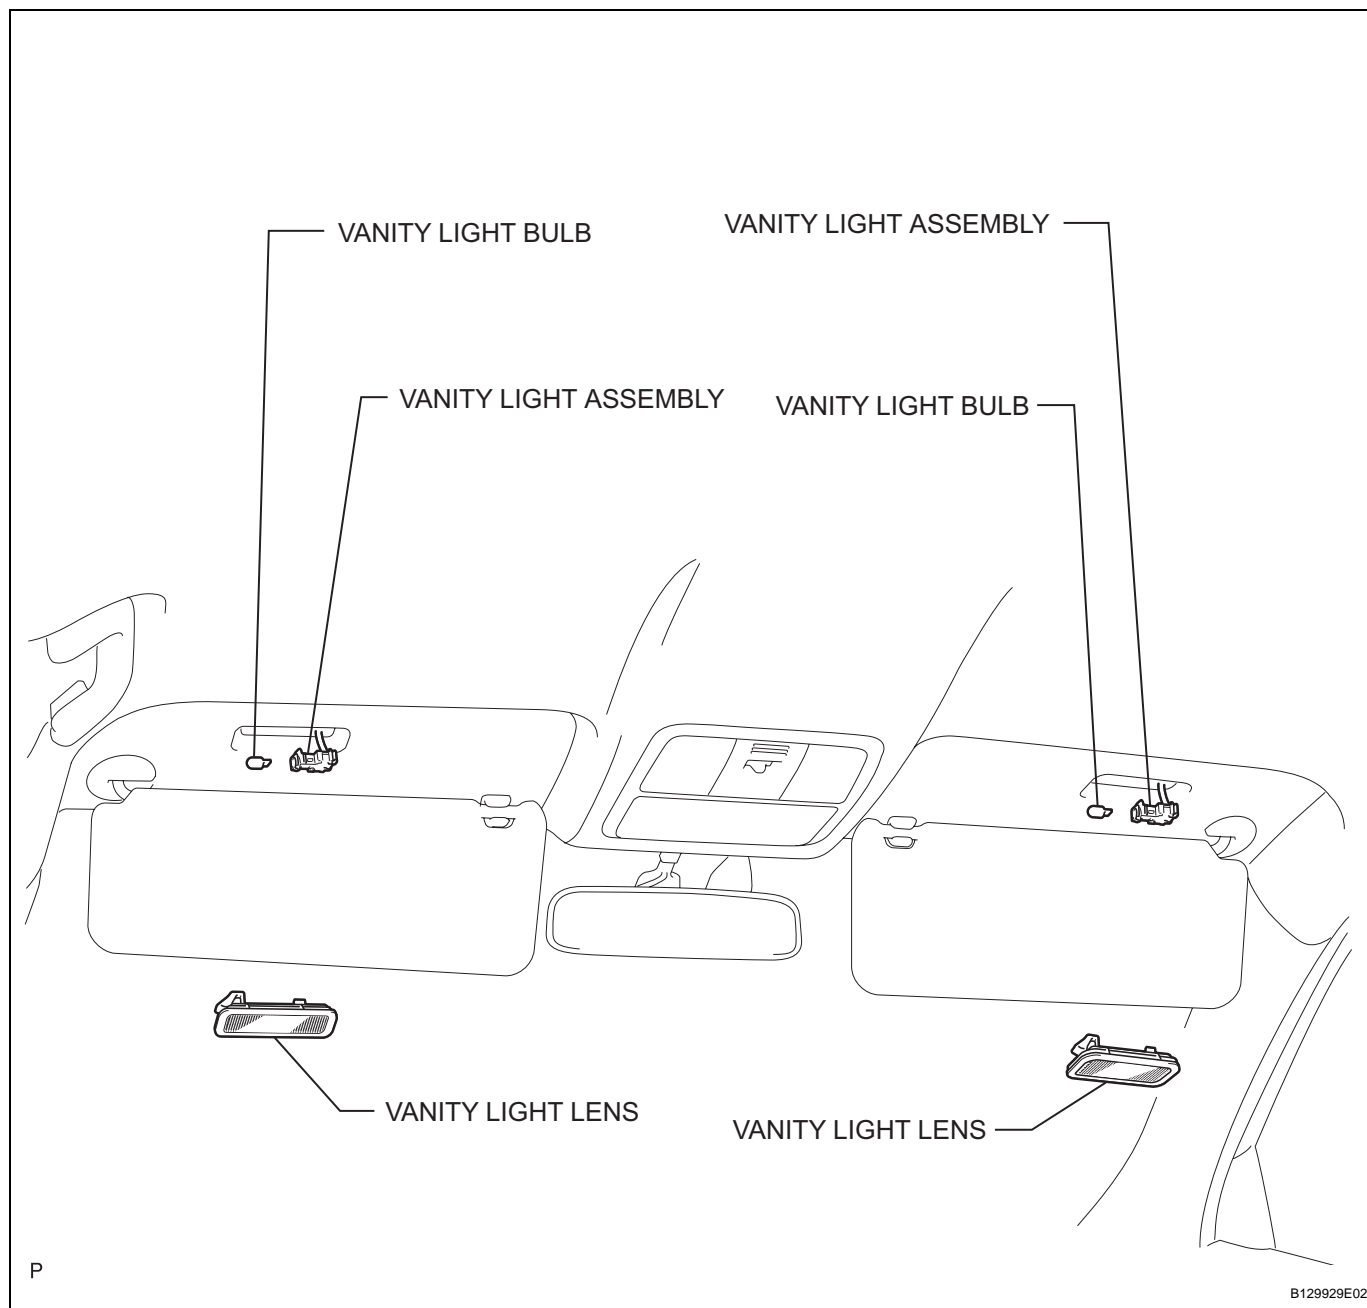

REMOVAL

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:



Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE VANITY LIGHT ASSEMBLY


- (a) Using a screwdriver, pry out the vanity light.

HINT:

Tape the screwdriver tip before use.

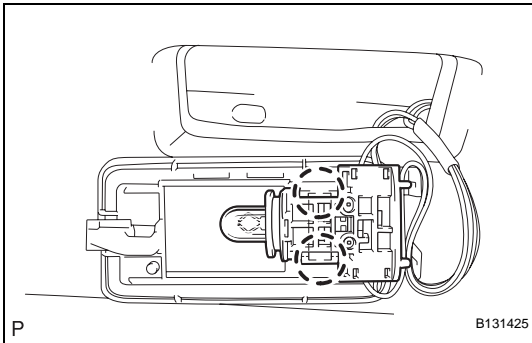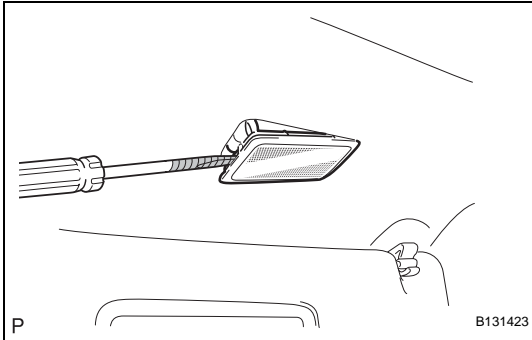


- (b) Detach the 2 claws and vanity light.

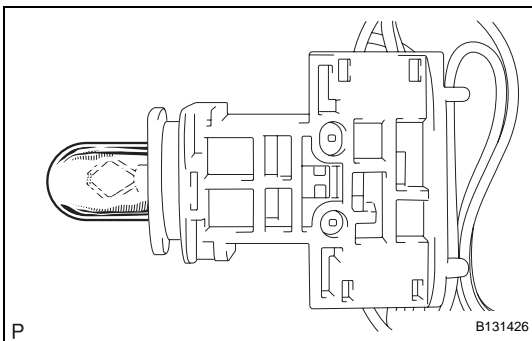

3. REMOVE VANITY LIGHT BULB

- (a) Remove the light bulb from the vanity light.

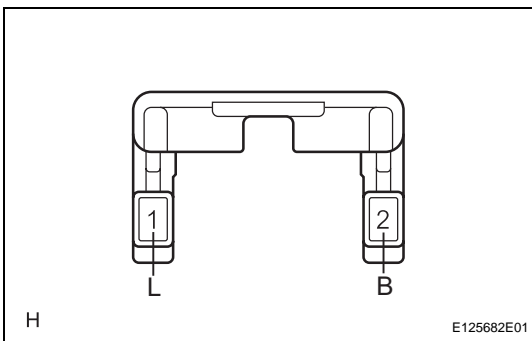

INSPECTION

1. INSPECT VISOR ASSEMBLY

- (a) Remove the visor assembly.

- (b) Inspect vanity light switch.


Standard resistance

Tester Connection	Condition	Specified Condition
1 (L) - 2 (B)	Visor raise	10 k Ω or higher
	Visor lower and mirror cover open	Below 1 Ω
	Visor lower and mirror cover close	10 k Ω or higher


If the result is not as specified, replace the visor assembly.

INSTALLATION**1. INSTALL VANITY LIGHT BULB**

- (a) Install the light bulb to the vanity light.

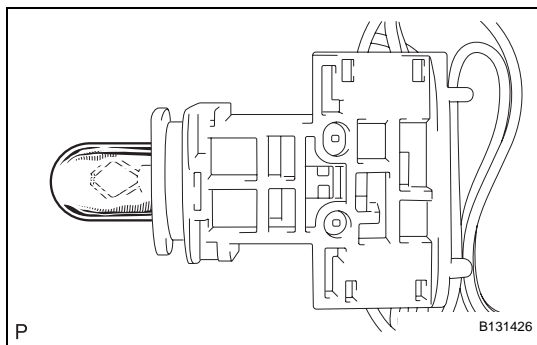**2. INSTALL VANITY LIGHT ASSEMBLY**

- (a) Attach the 2 claws and install the vanity light lens to the vanity light.

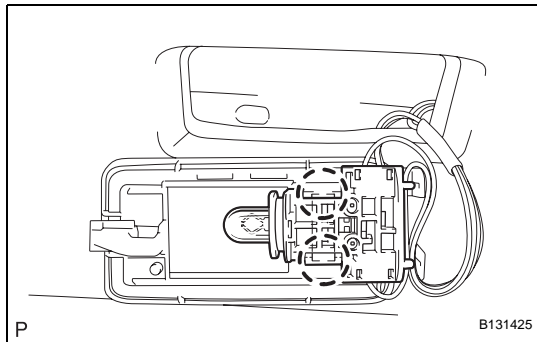

- (b) Install the vanity light.

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL